



2D Barcode Scanner User's Manual

RM1760



V1.0.1

intro

This user's manual is designed for 2D barcode scanner. For detailed usage information, please download the complete user's manual from our website or from our authorized distributors.

Scanning the corresponding setting code, you can change the bar code scanner related function Settings.

System settings

▣ Factory default settings



Factory default settings

Note: Factory default settings are marked with an asterisk "*" in this manual.

▣ Interface



USB-KBW(*)



USB-COM



RS-232

▣ Barcode setting



Activate scanning of all barcode types



Turn on default reading type (*)



Video Reverse OFF(*)



Video Reverse ON

▣ Reading mode



Manual mode(*)



Continuous mode



Automatic mode

▣ Sensitivity



Low(*)



Middle

▣ Sound



On(*)



Off

▣ illumination



Reading Normal(*)



Off



On

▣ Aiming



Reading Normal(*)



Off



On

USB-KBW Setting

Virtual keyboard



standard keyboard(*)



Virtual keyboard



Ctrl



Alt



Control character
output is off(*)

Data output encoding format



GBK(*)



UTF8



Original data output



UNICODE

CapsLock Status Settings



CapsLock-Off



CapsLock-On

Web address code recognition



Enable(*)



Disable

Add terminal key stroke



Deactivate
terminal addition



Add terminal CR(*)



Add terminal TAB



Add terminal CR+LF

Keyboard layout



USA(*)



French



Hungary



Japan



Turkey Q



Czech



Germany



Italy



Spain



Mexico
(Latin America)

RS-232 Setting

Baud rate



1200bps



4800bps



9600bps(*)



14400bps



19200bps



38400bps



57600bps



115200bps